



NY Thermal Inc.
Tel: (506) 657-6000
Toll Free: 1-800-688-2575
Fax: 1-506-432-1135
Web: www.nythermal.com
Email: info@nythermal.com

83605 Lx Inlet Sensor, 83606 Lx Outlet Sensor **Installation Instructions**

▲WARNING

This boiler must be serviced by a qualified heating technician. Failure to properly maintain or service this appliance may result in property damage, serious injury to occupants or, death.

▲WARNING

The installation of this kit must be performed by a qualified boiler technician. Installing this kit without the proper qualifications and training is hazardous and may result in property damage or death.

▲WARNING

Sensor to be tightened to 10 FT-LB. Over tightening the sensor may result in damage or destruction of the sensor as well as the heat exchanger.

Applicable Boilers:

Lx150-800

Tools Required:

- 10mm socket
- Torque wrench
- Gas Tape
- Thread sealer



83605 Inlet Sensor

NOTICE

Read these instructions thoroughly before beginning your cleaning procedure



83606 Outlet Sensor



Apply 1.5 to 2 turns of thread sealing tape and a thin coat of pipe joint compound.



Hand tighten by hand then torque to 10 lb.-ft.

⚠ WARNING

Over tightening the sensor may result in damage or destruction of the sensor as well as the heat exchanger.