

NY Thermal Inc.
Tel: (506) 657-6000
Toll Free: 1-800-688-2575
Fax: 1-506-432-1135
Web: www.nythermal.com
Email: info@nythermal.com

83724-1 Spark Ignitor Wire Assembly

⚠ WARNING

The installation of this kit must be performed by a qualified boiler technician. Installing this kit without the proper qualifications and training is hazardous and may result in property damage or death

⚠ WARNING

Power Off - Failure to turn off the power, before servicing this part, may result in a severe electrical shock, causing serious injury to the installer and/or possibly death.

Applicable Boiler Models

- Lx All models
- Tft All models
- Tx All models
- Vmax All models

Kit Contents

- 83724 Spark Ignitor Wire
- 85068 6" Cable Tie
- 85140 2 1/2" Silicone Tube 7/8"ID

Tools Required

- 1/4" Nut Driver

Replacement Instructions

- 1) Turn off power to the boiler.
- 2) Disconnect the Spark Ignitor wire.
- 3) Install the tubing over the spark electrode on the spark transformer.
- 4) Secure it using the provided zip ties.
- 5) Install new spark ignitor wire.
- 6) Fire boiler and check for proper operation.



Cut

