

NY Thermal Inc.
Tel: (506) 657-6000
Toll Free: 1-800-688-2575
Fax: 1-506-432-1135
Web: www.nythermal.com
Email: info@nythermal.com

84474 Auto Air Vent, Taco, 1/2" NPT (479-3)

Applicable Boiler Models

- Tx All models
- TFT All models
- Vmax All models

Kit Contents


- 1 Taco Auto Air Vent

Tools Required

- Needle nose pliers
- Adjustable Wrench
- Pipe wrench
- Thread tape

Replacement Instructions

- 1) Turn off power and gas to the boiler.
- 2) Drain boiler of water.
- 3) **(Tx Only)** remove air vent retaining clip.
- 4) Remove the air vent and adapter.
- 5) Use thread sealing tape or pipe sealant on new air vent.
- 6) **(Tx Only)** Transfer air vent adapter to the new auto air vent.
- 7) Reinstall the new air vent.
- 8) **(Tx Only)** Press new assembly firmly into place and reinstall retaining clip.
- 9) Refill boiler with water and purge excess air.

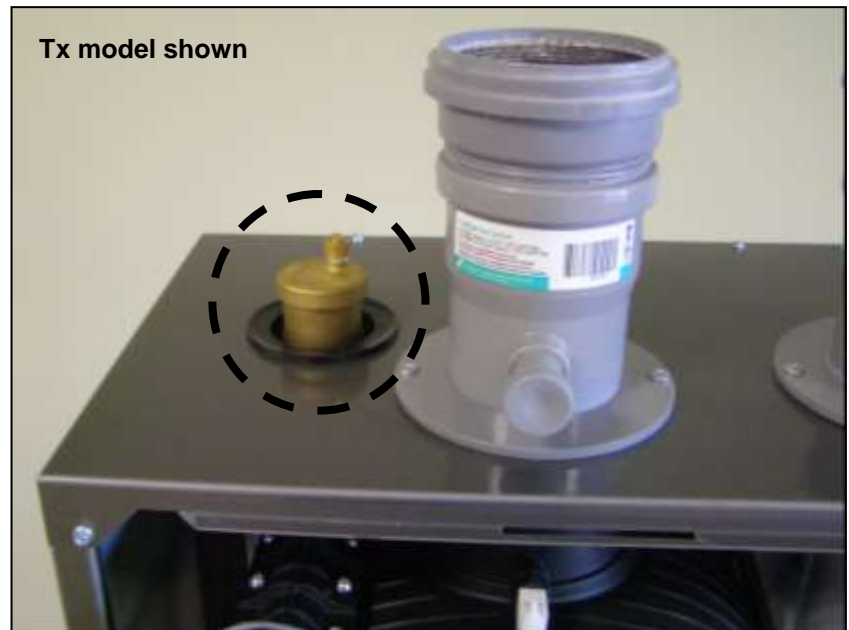

CAUTION

Air in Boiler - Ensure the boiler is completely filled with water to 15psi minimum, and that all the air is purged. Failure to do so could result in boiler malfunction resulting in property damage.

CAUTION

Clip Installatoin - Failure to properly seat the retaining clip or seal the air vent will result in water leakage causing property damage.