

NY Thermal Inc.
Tel: (506) 657-6000
Toll Free: 1-800-688-2575
Fax: 1-506-432-1135
Web: www.nythermal.com
Email: info@nythermal.com

84780 Tasseron Flue Sensor (TSD21A2)

Applicable Boiler Models

- Tx51
- Tx81
- Tx101
- Tx151, Tx151C
- Tx200, Tx200C

Kit Contents


- 1 Tasseron Flue Sensor

Tools Required

- ¼" nut driver

Replacement Instructions

- 1) Turn off power and gas to the boiler.
- 2) Disconnect the electrical connector from the flue sensor.
- 3) To remove; press on flue sensor and rotate counter clockwise 90°.
- 4) Ensure that the O-ring is on the new flue sensor prior to installation.
- 5) Secure the flue sensor by pressing firmly into the flue box and turning clockwise 90 °.
- 6) Turn on power and gas, confirm proper operation and check for leaks.

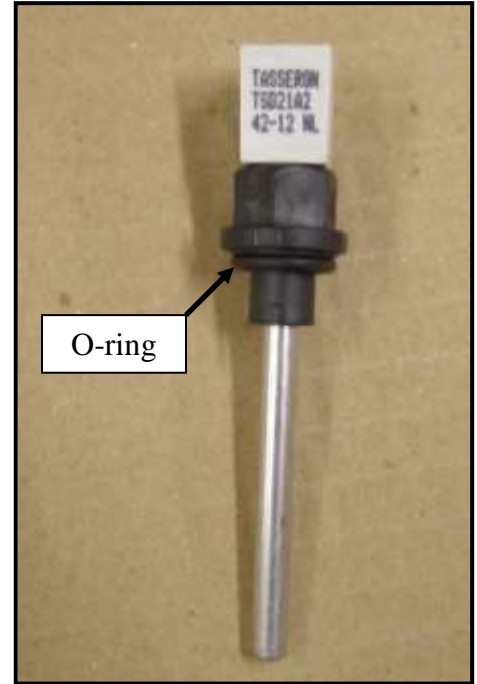

Flue Sensor Installation - Failure to properly install the flue sensor will result in flue gas leakage which may lead to serious injury or death.