

NY Thermal Inc.
Tel: (506) 657-6000
Toll Free: 1-800-688-2575
Fax: 1-506-432-1135
Web: www.nythermal.com
Email: info@nythermal.com

84886 Thermal Fuse

Applicable Boiler Models

- All Tx boilers

Kit Contents (Figure 1)

- Thermal Fuse
- Instructions

Tools Required

- 1/4" nut driver
- Needle Nose Pliers

***** Warning, under no circumstances may the boiler be operated without a new Thermal Fuse*****



Replacement Instructions

- 1) Turn off power and gas to the boiler.
- 2) Using the attached Detailed Service and Inspection Procedure, clean and inspect the boiler.
- 3) Press down on the thermal fuse and rotate it counter clockwise to remove it.



Operating a damaged boiler: If any discoloration or warping is noticed, the heat exchanger must be replaced, failure to replace the damaged heat exchanger may result in unsafe operation leading to serious injury or death.

- 4) Install the new fuse.



Replacing a thermal fuse without diagnosing and correcting the cause of the failure will result in overheating leading to fire, serious injury, or death.

Figure 2

