

**NY Thermal Inc.**  
Tel: (506) 657-6000  
Toll Free: 1-800-688-2575  
Fax: 1-506-432-1135  
Web: www.nythermal.com  
Email: info@nythermal.com

**84918**

## **Fuse, LFT 3.15A, 250V**

**Replacement in-line fuse for Tx and Vmax Ignition Control**

### **Applicable Boiler Models**

- Tx51, Tx81, Tx101, Tx151, Tx151C
- Tx200, Tx200C
- VM110, VM110P, VM153, VM153P

### **Kit Contents**

- 1 Fuse

### **Tools Required**

- ¼" Nut Driver

### **Replacement Instructions**

- 1) Turn off power and gas to the boiler.
- 2) Remove front cover.
- 3) Remove fuse holder located at F1 on the control panel as indicated.
- 4) Place new fuse into the fuse holder and re-install fuse holder.
- 5) Turn on the boiler and check for proper operation.

