

NY Thermal Inc.
Tel: (506) 657-6000
Toll Free: 1-800-688-2575
Fax: 1-506-432-1135
Web: www.nythermal.com
Email: info@nythermal.com

85155

Tx200, Tx200C Blower Motor Blower Motor Instructions

⚠ WARNING

This boiler must be serviced by a qualified heating technician. Failure to properly maintain or service this appliance may result in property damage, serious injury to occupants or, death.

⚠ WARNING

The installation of this kit must be performed by a qualified boiler technician. Installing this kit without the proper background and training is hazardous and may result in property damage or death.

Applicable Boiler Models


- Tx200
- Tx200C

Kit Contains


- 85155 Blower Motor

Tools Required

- 8mm Nut Driver or Wrench
- Torx T25 Screwdriver
- #1 Philips Screwdriver
- M5 Hex Key/Allen Key
- Pipe Wrench
- Combustion Analyzer

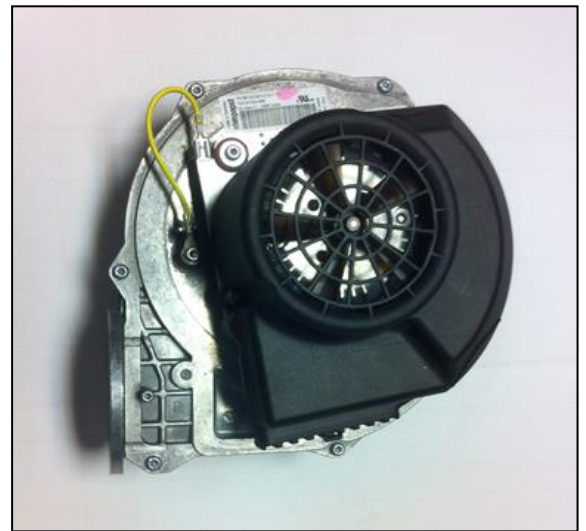

Replacement instructions:

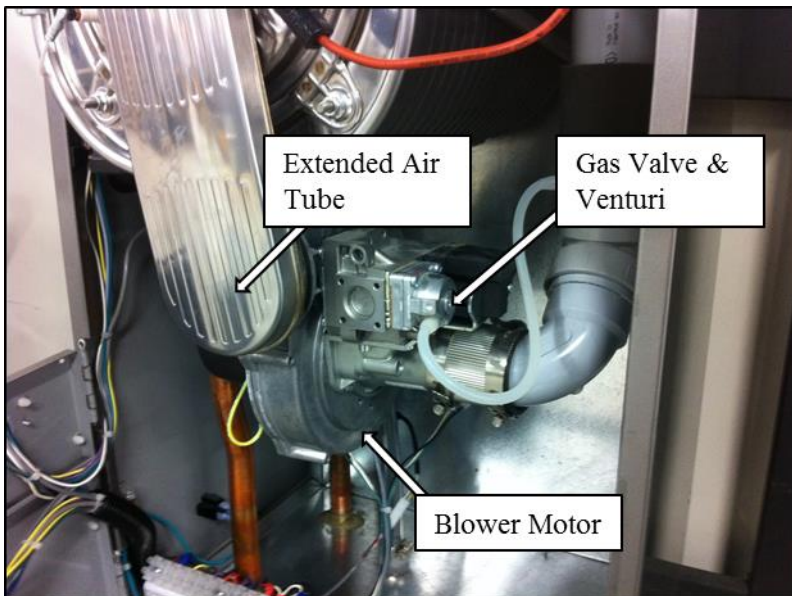

- Turn off power and gas to the boiler.
- Remove air inlet from venturi.
- Remove the gas line from the gas valve.
- Remove wiring from burner door, gas valve, and blower motor.
- Remove burner door, blower motor, venturi, and gas valve as a unit.
- Transfer burner door, gas valve and venturi to the new blower motor.
- Re-assemble in reverse order.

⚠ DANGER

Gas Leakage – Failure to properly seal the blower to the extended air tube will result in gas leakage which can result in fire, explosion, serious injury, or death.