

**NY Thermal Inc.**  
 Tel: (506) 657-6000  
 Toll Free: 1-800-688-2575  
 Fax: 1-506-432-1135  
 Web: [www.nythermal.com](http://www.nythermal.com)  
 Email: [info@nythermal.com](mailto:info@nythermal.com)


# 85141 Support Bracket Kit

## Applicable Models

- CMV2 300-399 Requires 2 X 85141
- CMV3 300-399 Requires 1 X 85141

## Kit Contents

- Exhaust Bracket
- Intake Bracket
- Base plates (2)
- Top C Clamp (2)
- Bottom C Clamp (2)
- 83562 Self drilling screw (2)
- 84070 Nut (4)
- 83157 Screw (4)
- Machine Screws (4)
- 5" Threaded Rod (2)
- 85083 Centrocerin

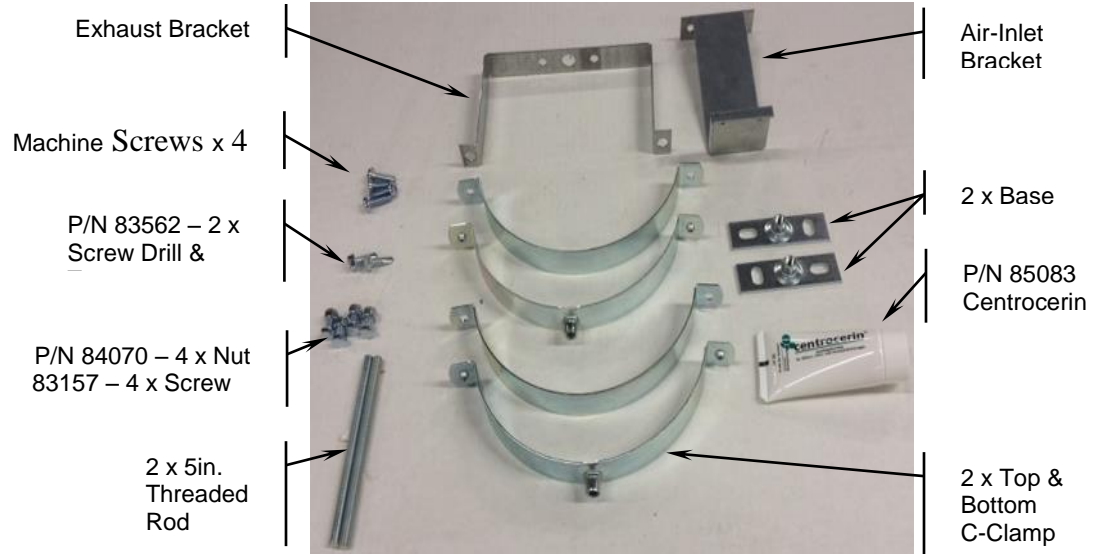


## Tools Required

- Screw Driver, Philips #2
- 3/8" Wrench
- Hacksaw

## Installation Instructions

➤ Assembly Instructions – Piping to the LEFT

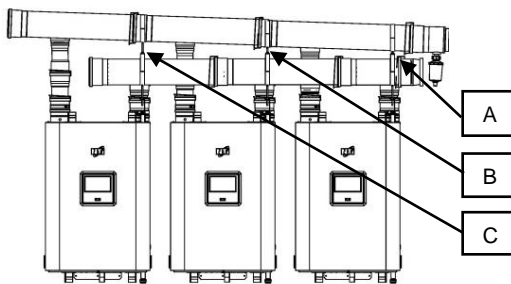


Exhaust Bracket	Dimension
A	3/4"
B	1-3/4"
C	2-3/4"

Step 1 - Thread the rod into the nutserts of the Clamp and Exhaust Bracket until required dimensions are obtained.

Step 2 - Ensure the threaded rod is not protruding from the nutsert on the inside diameter of the Clamp.


Step 3 - Cut the excess threaded rod off and discard.

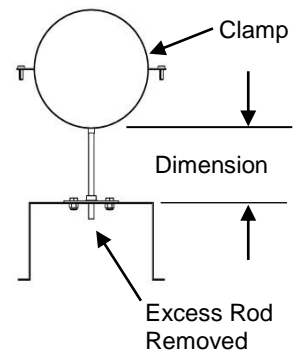

**NOTICE**

Exhaust Bracket "C" is only applicable with CVM3 300-399 (3 boiler Common Vent Manifold System).

Assembly Instructions – Piping to the RIGHT

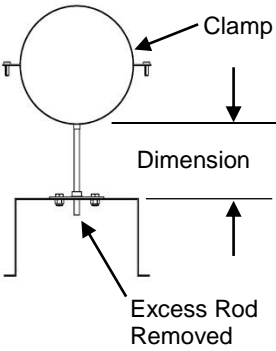


Exhaust Bracket	Dimension
A	2-1/2"
B	3-1/2"
C	4-1/2"

Step 1 - Thread the rod into the nutserts of the Clamp and Exhaust Bracket until required dimensions are obtained.

Step 2 - Ensure the threaded rod is not protruding from the nutsert on the inside diameter of the Clamp.

Step 3 - Cut the excess threaded rod off and discard.

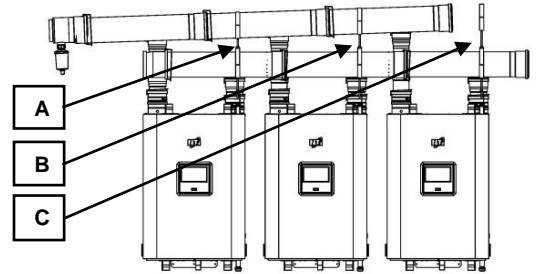

**NOTICE**

Exhaust Bracket "C" is only applicable with CVM3 300-399 (3 boiler Common Vent Manifold System).